


MLM 104 Faceplates Installation Guide

MLM 104 Faceplates


This guide provides instructions for installing the following Extron MediaLink™ Mounting Options faceplates, which are designed for use with MLC 104 IP Plus MediaLink Controllers.

NOTE The MLM 104 L, MLM 104 2GWP, or MLM 104 4GWP faceplate is shipped with the MLC 104 IP Plus controller, depending on the controller configuration that is ordered. The rest of the mounting options described below may be ordered separately as replacements, or for use with an MLC 104 IP Plus that is ordered without a faceplate.

- **MLM 104 L** — A low-profile, 3.15" H x 6.50" W (8.0 cm H x 16.5 cm W) lectern/furniture-mounting faceplate. This faceplate is required when you are mounting an MLC 104 IP Plus using an optional UCM RAAP or UCM 10X8P mounting kit.
Part numbers: 70-357-02 (black), 70-357-03 (white), 70-357-05 (RAL9010 white)

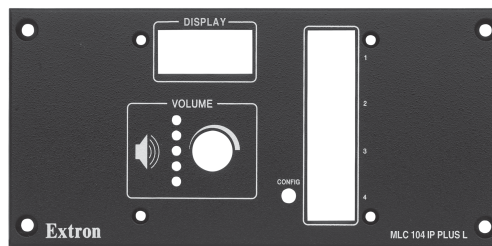


- **MLM 104 LAAP** — A low-profile, 3.15" H x 10.00" W (8.0 cm H x 25.40 cm W) lectern/furniture-mounting faceplate with an opening that accommodates four single-space AAPs
Part numbers: 70-358-02 (black), 70-358-03 (white), 70-358-05 (RAL9010 white)

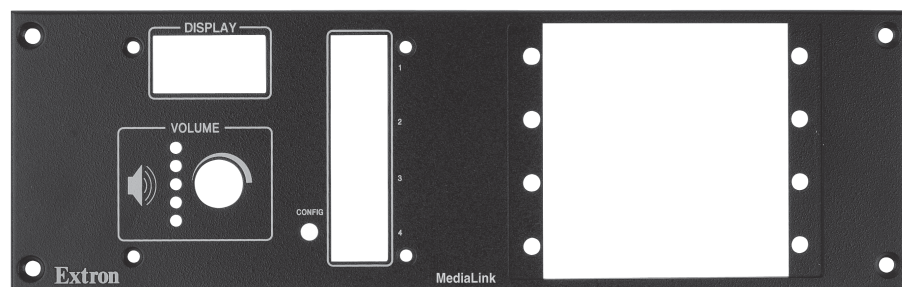


MLM 104 Faceplates Installation Guide, cont'd


- **MLM 104 2GWP** — A two-gang (4.50" H x 4.60" W [11.43 cm H x 11.68 cm W]) faceplate that can be mounted to a mud ring (mounting bracket), an Extron Surface Mount Box, an Extron External Wall Box, or a standard electrical box
Part numbers: 70-378-02 (black), 70-378-03 (white), 70-378-05 (RAL9010 white)

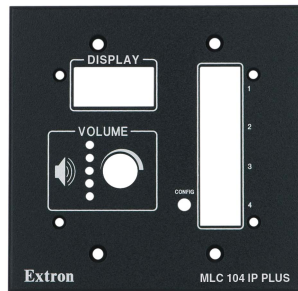

- **MLM 104 4GWP** — A four-gang (4.50" H x 8.23" W [11.43 cm H x 20.9 cm W]) faceplate with an opening that accommodates four single-space AAPs. It can be mounted to a mud ring, an Extron Surface Mount Box, an Extron External Wall Box, or a standard electrical box.
Part numbers: 70-379-02 (black), 70-379-03 (white), 70-379-05 (RAL9010 white)

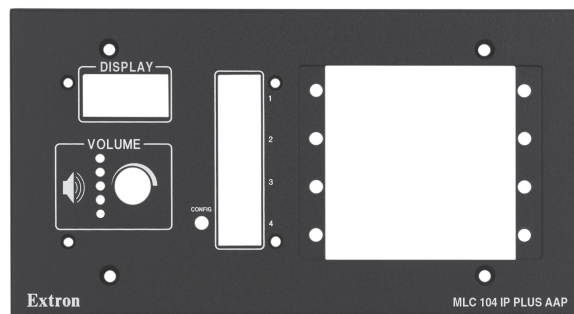


- **MLM 104 6GWP** — A six-gang (4.50" H x 11.75" W [11.43 cm H x 29.85 cm W]) faceplate with two openings that accommodate four single-space AAPs each (eight AAPs total). It can be mounted to a mud ring, an Extron Surface Mount Box, an Extron External Wall Box, or a standard electrical box.
Part numbers: 70-355-02 (black), 70-355-03 (white), 70-355-05 (RAL9010 white)

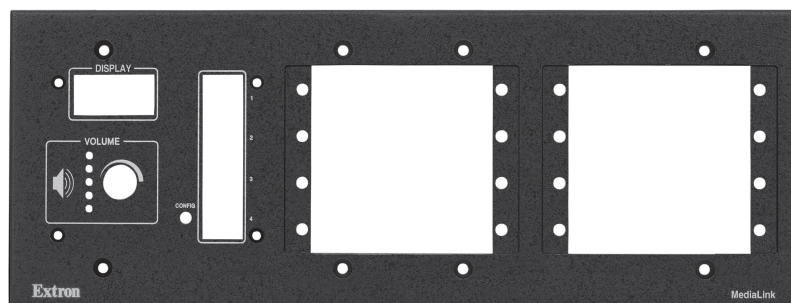


Replacing the MLC 104 IP Plus Faceplate with an MLM Faceplate

1. If your MLC controller is already installed in a wall or furniture, remove the four screws that attach it to its mounting surface (marked ① in the diagram below), and lift it out.
2. After the MLC has been removed from the wall or furniture, use a small Phillips screwdriver to remove the four faceplate attachment screws (marked ② in the diagram below), and save them for later use.

CAUTION Do not remove the four faceplate screws while the MLC is installed in a wall or furniture, or the controller may fall into the wall or furniture.

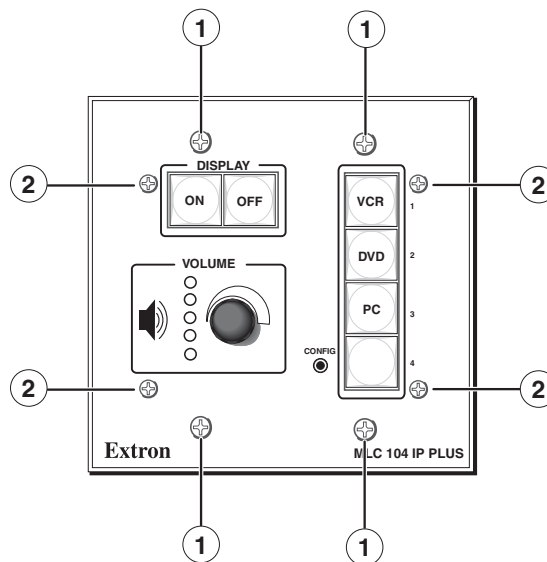

3. Lift the faceplate off the MLC 104 IP Plus, as shown below.

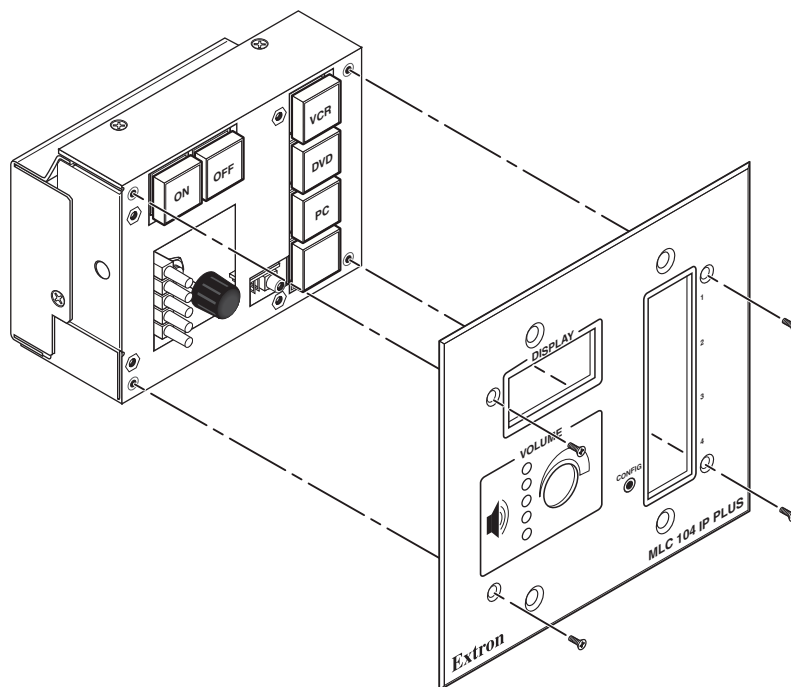

MLM 104 Faceplates Installation Guide, cont'd

4. Align the openings in the new MLM faceplate with the controller's buttons, knob, and LEDs, then place the new faceplate on the MLC 104 IP Plus.
5. Replace the four screws removed in step 2, and hand tighten them.
6. Install the MLC 104 IP Plus controller in a wall or furniture as appropriate.


Templates

Use one of the following templates as a guide to measure and mark the hole for installing the MLM 104 faceplate with an attached MLC 104 IP Plus. (Refer to your *MLC 104 IP User's Manual* for instructions on preparing the mounting site.)

CAUTION *These templates are not to scale. Use the dimensions shown in the templates as reference guidelines for measuring and drawing the rectangle that will be cut out.*

The MLC controller requires a depth of at least 2.0" (5.1 cm) inside the wall or furniture.

MLM 104 L and MLC 104 IP Plus L template

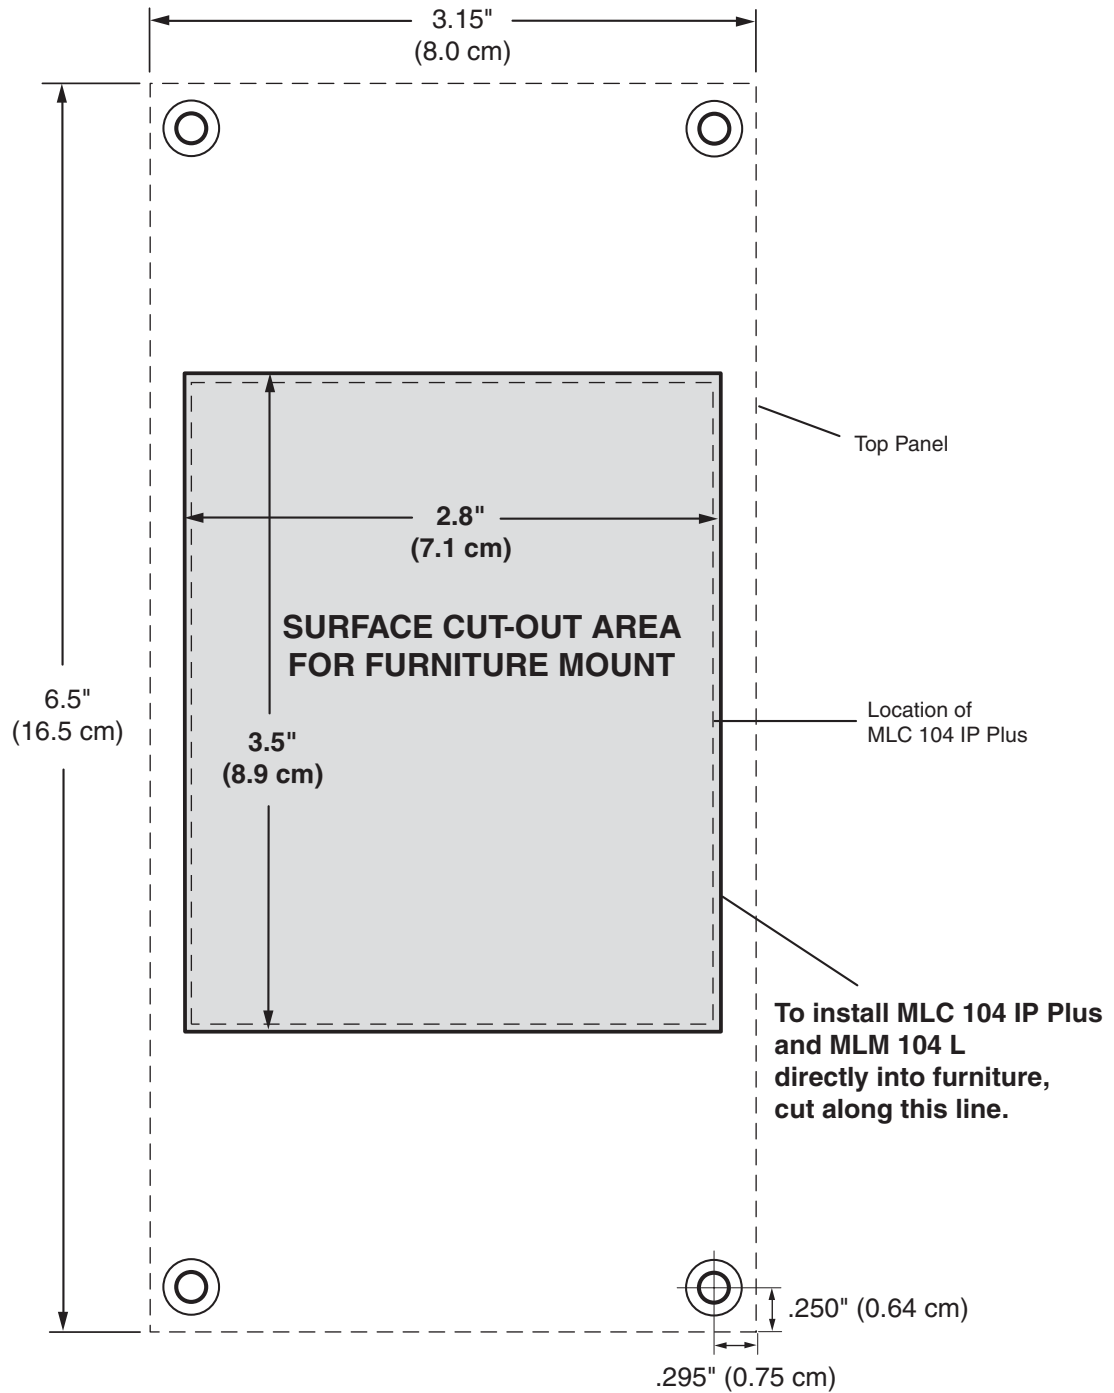


TEMPLATE IS **NOT** FULL SIZE.

Cut-Out Template for Extron's **MLM 104 L**
and **MLC 104 IP Plus L**

MLM 104 Faceplates Installation Guide, cont'd


MLM 104 LAAP template

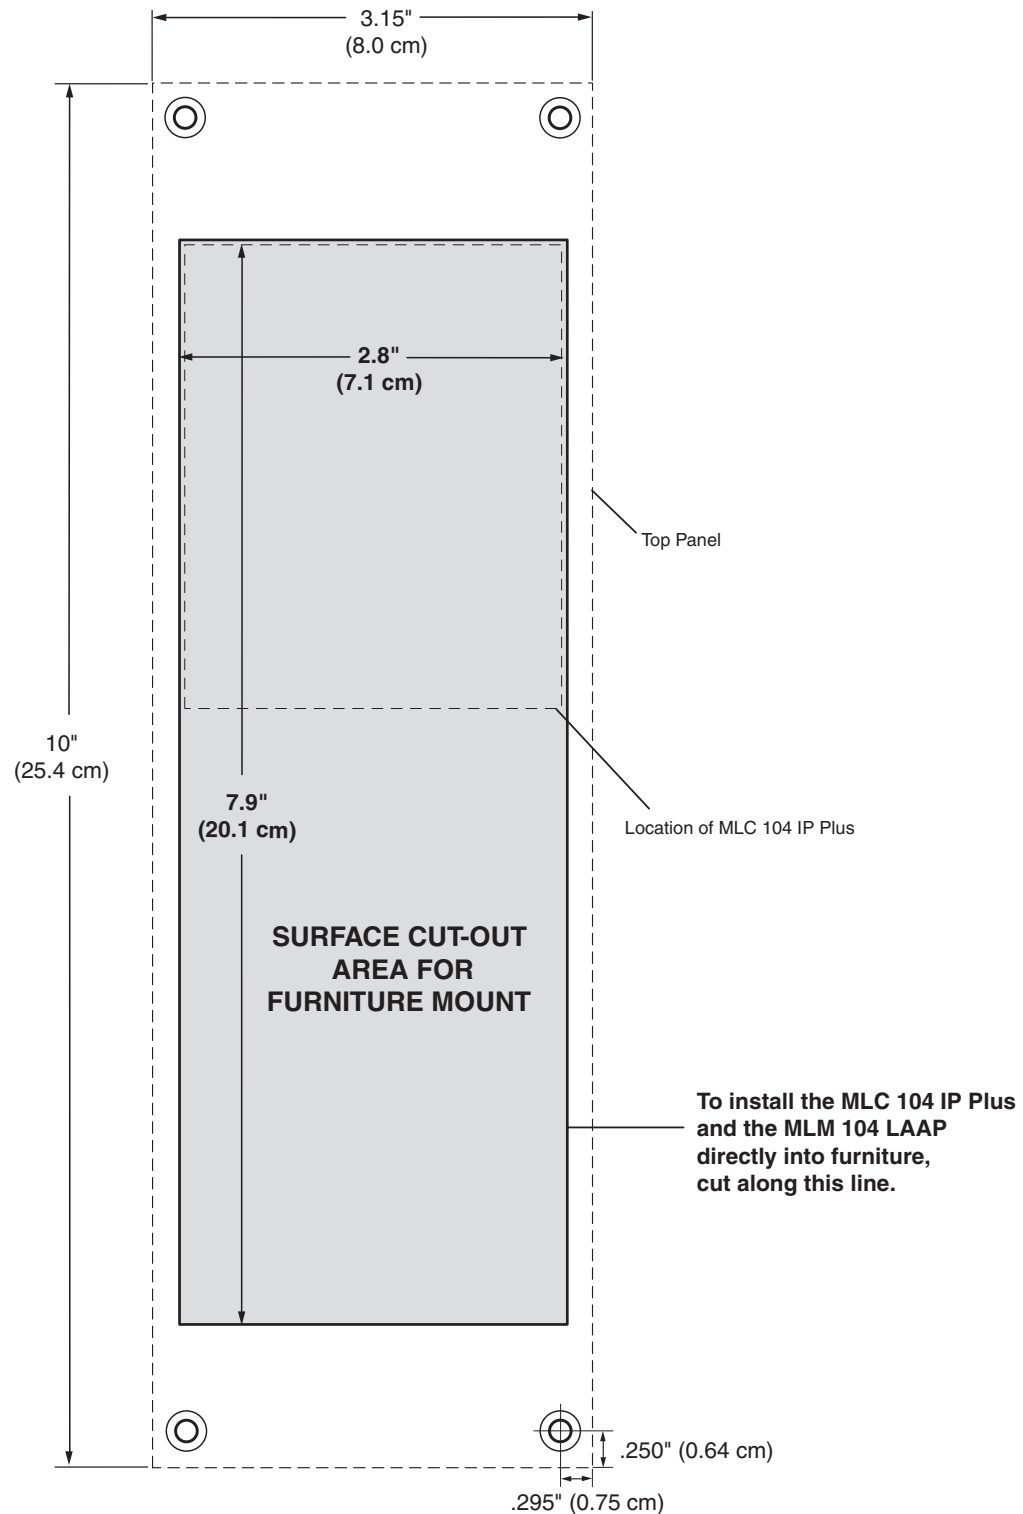

TEMPLATE IS **NOT** FULL SIZE.

Cut-Out Template for Extron's **MLM 104 LAAP**


MLM 104 2GWP and MLC 104 IP Plus template

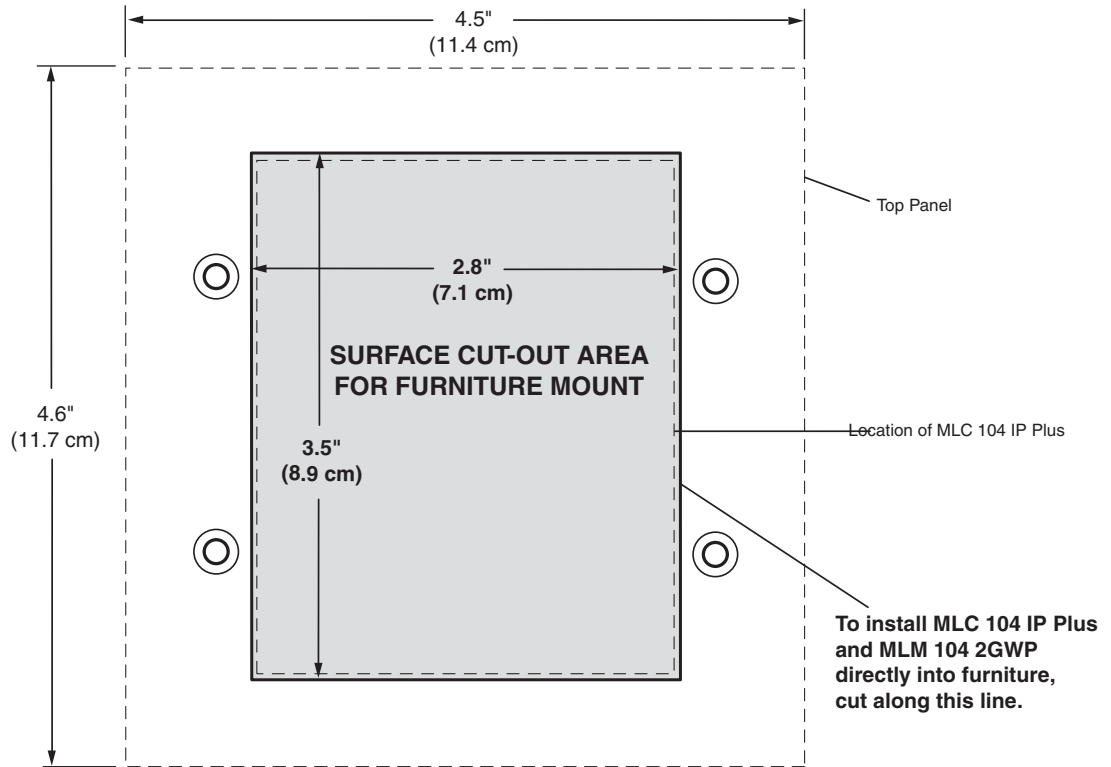

TEMPLATE IS **NOT** FULL SIZE.
Cut-Out Template for Extron's **MLM 104 2GWP**
and **MLC 104 IP Plus**


MLM 104 Faceplates Installation Guide, cont'd

MLM 104 4GWP and MLC 104 IP Plus AAP template

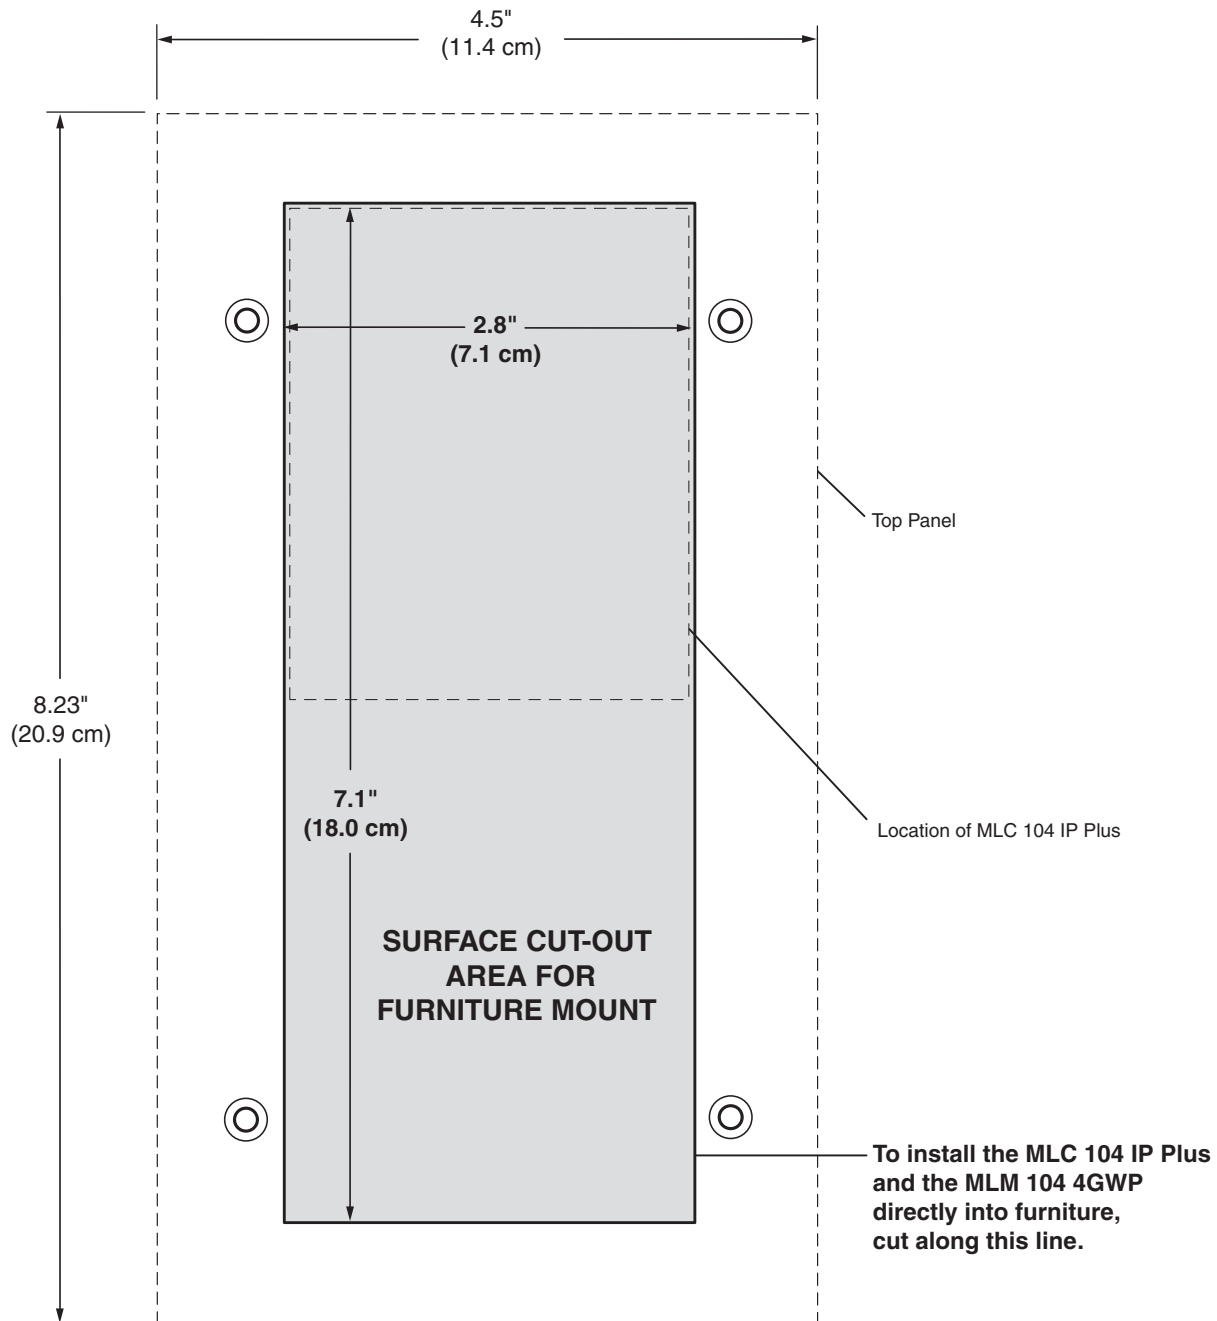

TEMPLATE IS **NOT** FULL SIZE.
Cut-Out Template for Extron's **MLM 104 4GWP**
and **MLC 104 IP Plus AAP**

MLM 104 6GWP template

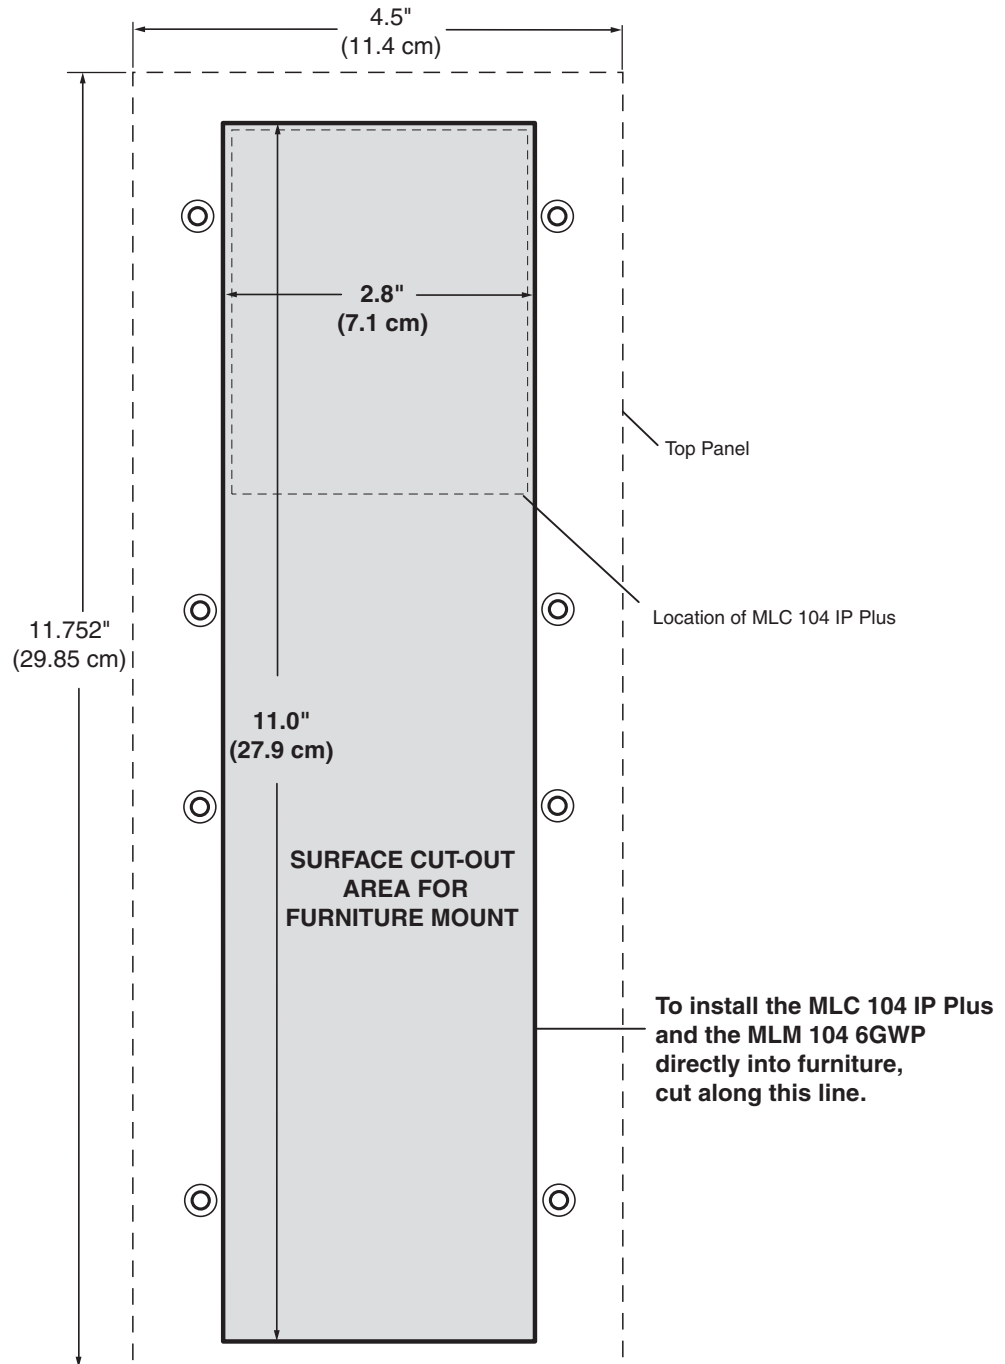

TEMPLATE IS **NOT** FULL SIZE.
Cut-Out Template for Extron's **MLM 104 6GWP**



Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
800.633.9876 714.491.1500
FAX 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort, The Netherlands
+800.3987.6673 +31.33.453.4040
FAX +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Rd. #04-01
PM Industrial Bldg., Singapore 368363
+800.7339.8766 +65.6383.4400
FAX +65.6383.4664

Extron Electronics, Japan
Kyodo Building, 16 Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan
+81.3.3511.7655 FAX +81.3.3511.7656